

**C200HX/HG/HE  
Replacement Guide**

**From C200HX/HG/HE to CJ2**

## **About this document**

This document provides the reference information for replacing C200HX/HG/HE PLC systems with CJ2 series PLC. This document does not include precautions and reminders ;please read and understand the important precautions and reminders described on the manuals of PLCs (both of PLC used in the existing system and PLC you will use to replace the existing PLC) before attempting to start operation.

## Related Manuals

### CPU Units

Man.No.	Model	Manual
W472	CJ2H-CPU6□-EIP CJ2H-CPU6□ CJ2-CPU□□	CJ2 CPU Unit Hardware USER'S MANUAL
W473	CJ2H-CPU6□-EIP CJ2H-CPU6□ CJ2M-CPU□□	CJ2 CPU Unit Software USER'S MANUAL
W486	CJ2M-CPU□□+CH2M-MD21□	CJ2M Pulse I/O Module USER'S MANUAL
W474	CS1G/H-CPU□□H CS1G/H-CPU□□-V1 CS1D-CPU□□H CS1D-CPU□□S CJ1H-CPU□□H-R CJ1G/H-CPU□□H CJ1G-CPU□□P CJ1M/G-CPU□□ NSJ□-□□□□(B)-□□□	CS/CJ/NSJ Series INSTRUCTIONS REFERENCE MANUAL
W342	CS1G/H-CPU□□H CS1G/H-CPU□□-V1 CS1D-CPU□□H CS1D-CPU□□S CS1W-SCU□□-V1 CS1W-SCB□□-V1 CJ1H-CPU□□H-R CJ1G/H-CPU□□H CJ1G-CPU□□P CJ1M/G-CPU□□ CJ1W-SCU□□-V1 CP1H-X□□□□-□ CP1H-XA□□□□-□ CP1H-Y□□□□-□ NSJ□-□□□□(B)-□□□	CS/CJ/CP/NSJ Series Communications Commands REFERENCE MANUAL
W341	CQM1H-PRO01 CQM1-PRO01 C200H-PRO27 CS1W-KS001	CS/CJ Series Programming Consoles OPERATION MANUAL
W302	C200HX/HG/HE -CPU□□/CPU□□-Z	SYSMAC $\alpha$ INSTALLATION GUIDE
W303	C200HX/HG/HE	SYSMAC $\alpha$ OPERATION MANUAL
W322	C200HX-CPU□□-ZE C200HG-CPU□□-ZE C200HE-CPU□□-ZE	SYSMAC $\alpha$ OPERATION MANUAL

## Special I/O Units

Man.No.	Model	Manual
W368	CS1W-PTS□□ CS1W-PTW□□ CS1W-PDC□□ CS1W-PTR□□ CS1W-PPS□□ CS1W-PMV□□ CJ1W-PTS□□ CJ1W-PDC□□ CJ1W-PH41U	CS/CJ Series Analog I/O Units OPERATION MANUAL
W345	CS1W-AD0□□-V1/-AD161 CS1W-DA0□□ CS1W-MAD44 CJ1W-AD0□□-V1/-AD042 CJ1W-DA0□□/-DA042V CJ1W-MAD42	CS/CJ Series Analog I/O Units OPERATION MANUAL
W396	CJ1W-TC□□□	CJ Series Temperature Control Units OPERATION MANUAL
W401	CJ1W-CT021	CJ Series High-speed Counter Units OPERATION MANUAL
W397	CJ1W-NC□□3	CJ Series Position Control Units OPERATION MANUAL
W477	CJ1W-NC□□4	CJ Series Position Control Units OPERATION MANUAL
W426	CS1W-NC□71 CJ1W-NC□71(-MA)	CS/CJ Series Position Control Units OPERATION MANUAL
W435	CS1W-MCH71 CJ1W-MCH71	CS/CJ series Motion Control Units OPERATION MANUAL
W336	CS1W-SCB□□-V1 CS1W-SCU□□-V1 CJ1W-SCU□□-V1	CS/CJ Series Serial Communications Boards Serial Communications Units OPERATION MANUAL
W440	CS1W-FLN22 CJ1W-FLN22(100BASE-TX)	CS/CJ Series FL-net Units OPERATION MANUAL
V236	CS1W-SPU01 CS1W-SPU02-V2 CJ1W-SPU01-V2	CS/CJ Series SPU Units OPERATION MANUAL
V237	WS02-SPTC1-V2	SPU-Console OPERATION MANUAL
W124	C200H-TS001/002/101/102	C200H Temperature Sensor Units OPERATION MANUAL
W127	C200H-AD001/DA001	C200H Analog I/O Units OPERATION GUIDE
W325	C200H-AD003 C200H-DA003/DA004 C200H-MAD01	C200H Analog I/O Units OPERATION MANUAL
W225	C200H-TC001/002/003 C200H-TC101/102/103	C200H Temperature Control Units OPERATION MANUAL
W240	C200H-TV001/002/003 C200H-TV101/102/103	C200H Heat/Cool Temperature Control Units OPERATION MANUAL
W241	C200H-PID01/02/03	C200H PID Control Unit OPERATION MANUAL
W141	C200H-CT001-V1/CT002	C200H High-speed Counter Units OPERATION MANUAL
W311	C200H-CT021	C200H High-speed Counter Units OPERATION MANUAL
W224	C200H-CP114	C200H Cam Positioner Units OPERATION MANUAL
W334	C200HW-NC113/213/413	C200HW Position Control Units OPERATION MANUAL
W137	C200H-NC111	C200H Position Control Units OPERATION MANUAL
W128	C200H-NC112	C200H Position Control Units OPERATION MANUAL
W166	C200H-NC211	C200H Position Control Units OPERATION MANUAL
W314	C200H-MC221	C200H Motion Control Units OPERATION MANUAL:INTRODUCTION
W315	C200H-MC221	C200H Motion Control Units OPERATION MANUAL:DETAILS
W165	C200H-ASC02	C200H ASCII Units OPERATION MANUAL
W306	C200H-ASC11/21/31	C200H ASCII Units OPERATION MANUAL
W257	CVM1-PRS71	CVM1-PRS71 Teaching Box OPERATION MANUAL
W304	C200HW-COM01 C200HW-COM02-V1 to C200HW-COM06-EV1	C200HW Communication Boards OPERATION MANUAL

## Network Communications Units

Man.No.	Model	Manual
W309	CS1W-CLK23 CS1W-CLK21-V1 CJ1W-CLK23 CJ1W-CLK21-V1 C200HW-CLK21 CVM1-CLK21 CQM1H-CLK21 CS1W-RPT0□	Controller Link Units OPERATION MANUAL
W370	CS1W-CLK13 CS1W-CLK12-V1 CVM1-CLK12(H-PCF Cable) CS1W-CLK53 CS1W-CLK52-V1 CVM1-CLK52(GI Cable)	Optical Ring Controller Link Units OPERATION MANUAL
W465	CS1W-EIP21 CJ1W-EIP21 CJ2H-CPU6□-EIP CJ2M-CPU3□	CS/CJ Series EtherNet/IP Units OPERATION MANUAL
W420	CS1W-ETN21 CJ1W-ETN21 (100Base-TX)	CS/CJ Series Ethernet Units OPERATION MANUAL Construction of Networks
W421	CS1W-ETN21 CJ1W-ETN21(100Base-TX)	CS/CJ Series Ethernet Units OPERATION MANUAL Construction of Applications
W456	CS1W-CRM21 CJ1W-CRM21	CS/CJ Series CompoNet Master Units OPERATION MANUAL
W457	CRT1	CRT1 Series CompoNet Slave Units and Repeater Unit OPERATION MANUAL
W380	CS1W-DRM21-V1 CJ1W-DRM21	CS/CJ Series DeviceNet Units OPERATION MANUAL
W267	CS1W/CJ1W/C200HW DRT1/DRT2 GT1 CVM1	DeviceNet OPERATION MANUAL
W266	C200HW-SRM21-V1 CS1W-SRM21 CJ1W-SRM21 CQM1-SRM21-V1 SRT1/SRT2	CompoBus/S OPERATION MANUAL
W136	C500-RM001-(P)V1 C120-RM001(-P) C500-RT001/RT002-(P)V1 C500/C120-LK010(-P) C200H-RM001-PV1 C200H-RT001/002-P B500-I/O	C series Rack PCs Optical Remote I/O SYSTEM MANUAL
W308	C200HW-ZW3DV2/ZW3PC2 3G8F5-CLK11/21 3G8F6-CLK21	Controller Link Support Software OPERATION MANUAL
W120	C500-RM201/RT201 C200H-RM201/RT201/202 G71-IC16/OD16 G72C-ID16/OD16 S32-RS1	C series Rack PCs Wired Remote I/O SYSTEM MANUAL
W379	CVM1-DRM21-V1 C200HW-DRM21-V1	DeviceNet Master Units OPERATION MANUAL
W347	C200HW-DRT21 CQM1-DRT21 DRT1	DeviceNet Slaves OPERATION MANUAL
W135	C200H-LK401 C500-LK009-V1	C Series PC Link SYSTEM MANUAL

## Support Software

Man.No.	Model	Manual
W463	CXONE-AL□□C-V4	CX-One FA Integrated Tool Package SETUP MANUAL
W446	CXONE-AL□□D-V4	CX-Programmer OPERATION MANUAL
W447		CX-Programmer OPERATION MANUAL : Function Blocks/Structured Text
W366		CX-Simulator OPERATION MANUAL
W464		CX-Integrator OPERATION MANUAL
W344		CX-Protocol OPERATION MANUAL
W433		CX-Position OPERATION MANUAL
W436		CX-Motion-NCF OPERATION MANUAL
W448		CX-Motion-MCH OPERATION MANUAL

## ***Read and Understand this Document***

Please read and understand this document before using the product. Please consult your OMRON representative if you have any questions or comments.

## ***Warranty and Limitations of Liability***

### ***WARRANTY***

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

### ***LIMITATIONS OF LIABILITY***

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

## ***Disclaimers***

### ***CHANGE IN SPECIFICATIONS***

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

### ***DIMENSIONS AND WEIGHTS***

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

### ***PERFORMANCE DATA***

Performance data given in this manual is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

### ***ERRORS AND OMISSIONS***

The information in this manual has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.



## ***Application Considerations***

### ***SUITABILITY FOR USE***

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this manual.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

**NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.**

### ***PROGRAMMABLE PRODUCTS***

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.



# C200HX/HG/HE Replacement Guide

## From C200HX/HG/HE to CJ2


### Table of Contents

1. Work flow.....	2
2. Selecting the model.....	3
3. Reading data from SYSMAC α (C200HX/HG/HE).....	8
4. Converting the program into a program for CJ-series CPU Unit .....	10
5. Writing the data to CJ-series CPU Unit.....	12
6. Appendix .....	14
Appendix A. Instructions converted by Change Model on CX-Programmer. ....	14
Appendix B. Change of data area allocation .....	17
Appendix C. Change of PLC Settings .....	17
Appendix D. Change of execution timing etc.....	17
Appendix E. Table of Input/Output Units.....	18


The work flow to replace the SYSMAC $\alpha$ -series PLC (C200HX/HG/HE) to CJ-series PLC is as follows. Refer to the reference pages for details.

**1. Work flow**

1) Preliminary Steps: Take the following steps before starting the replacement work.

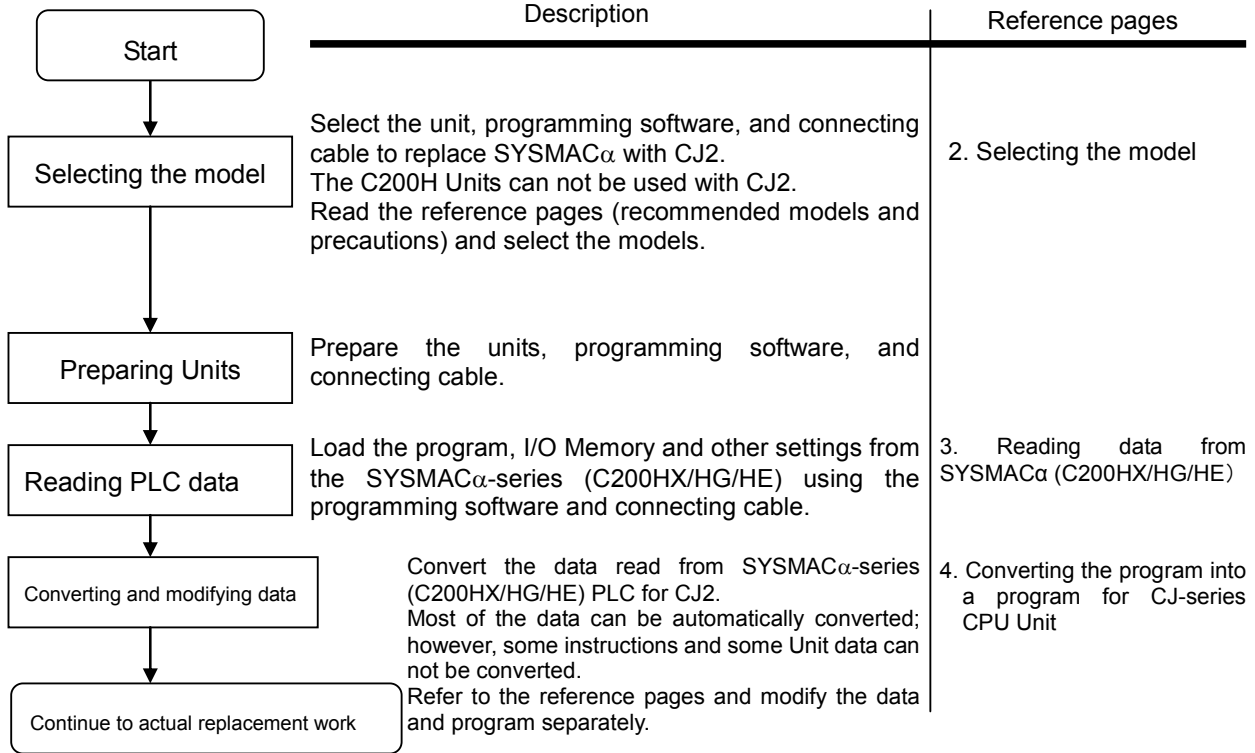


2) The actual work flow to replace the SYSMAC $\alpha$  to CJ2 is as follows.

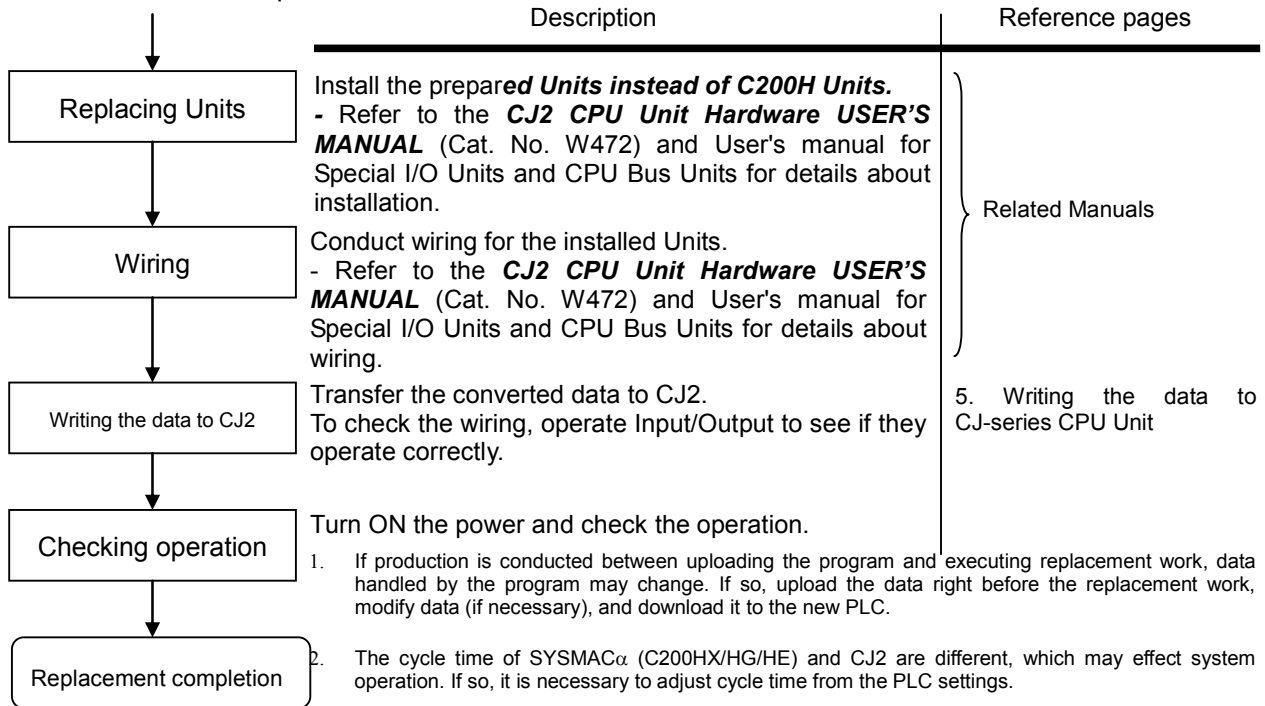

## 2. Selecting the model

### Outline of the system configuration

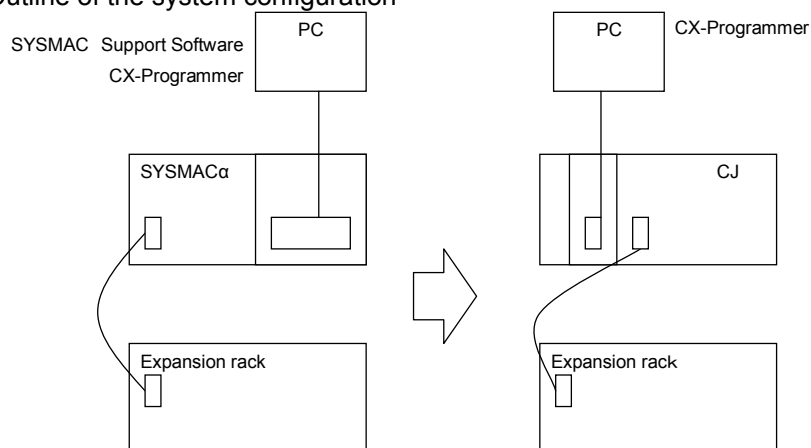

The table below lists the models of SYSMAC $\alpha$ -series and each corresponding models of CJ-series.

Select the CJ-series model which is compatible with the SYSMAC $\alpha$ -series model. Or, select the CJ-series model with similar specification to the SYSMAC $\alpha$ -series Unit.

Please refer to the *CJ2 CPU Unit Hardware USER'S MANUAL* (Cat. No, W472) for details of the Units.

#### < CPU Rack >

Unit name	SYSMAC $\alpha$ -series	CJ-series	Description
CPU Units	C200HE-CPU11(-Z) C200HE-CPU32(-Z) C200HE-CPU42(-Z) C200HG-CPU33(-Z) C200HG-CPU43(-Z) C200HG-CPU53(-Z) C200HG-CPU63(-Z) C200HX-CPU34(-Z) C200HX-CPU44(-Z) C200HX-CPU54(-Z) C200HX-CPU64(-Z) C200HX-CPU65-Z C200HX-CPU85-Z	<CJ2H> CJ2H-CPU64(-EIP) CJ2H-CPU65(-EIP) CJ2H-CPU66(-EIP) CJ2H-CPU67(-EIP) CJ2H-CPU68(-EIP)  <CJ2M> CJ2M-CPU11/CPU31 CJ2M-CPU12/CPU32 CJ2M-CPU13/CPU33 CJ2M-CPU14/CPU34 CJ2M-CPU15/CPU35	UM 50K steps UM 100K steps UM 150K steps UM 250K steps UM 400K steps * The EIP models have one built-in EtherNet/IP port  UM 5K steps UM 10K steps UM 20K steps UM 30K steps UM 60K steps * The CPU3□ models have one built-in EtherNet/IP port
Memory Cassette	C200HW-ME□□K C200HS-MP16K	HMC-EF□□□	
Power Supply Units	C200HW-PA□□□	CJ1W-PA202 (AC Power Supply Unit)	To use RUN output, prepare Output Unit.
		CJ1W-PA205C (AC Power Supply Unit)	With maintenance forecast monitor.
		CJ1W-PA205R (AC Power Supply Unit)	With RUN output.
	C200HW-PD□□□	CJ1W-PD022 (DC Power Supply Unit, non insulated type) CJ1W-PD025 (DC Power Supply Unit)	To use RUN output, prepare Output Unit. To use RUN output, prepare Output Unit.
Backplanes CPU Backplane	C200HW-BC031 C200HW-BC051 C200HW-BC081-V1 C200HW-BC101-V1	Unnecessary  <DIN track> PFP-50N PFP-100N PFP-100N2	The Backplane is not necessary for the CJ series. Install the CJ-series units on the DIN track.

< CPU Rack >

Unit name	SYSMAC $\alpha$ -series	CJ-series	Description
Communication Boards	C200HW-COM01	Unnecessary *	* It is not necessary to mount the communication unit for networks such as SYSMAC LINK and SYSNET.
	C200HW-COM02(-V1)	CJ1W-SCU21-V1	The CJ-series does not have the inner-board type communications units. Please use the unit type.
	C200HW-COM03(-V1)	CJ1W-SCU41-V1	
	C200HW-COM04(-V1)	CJ1W-SCU21-V1	
	C200HW-COM05(-V1)	CJ1W-SCU21-V1	
	C200HW-COM06(-V1)	CJ1W-SCU41-V1	
CPU Backplane Insulation Plates	C200H-ATT31 C200H-ATT51 C200H-ATT81 C200H-ATTA1	Unnecessary *	* Because the CJ-series has an installation structure to be insulated from the control board etc., Insulation Plates for CPU Backplanes is unnecessary.
Expansion Unit (I/O Control Unit)	Unnecessary	CJ1W-IC101	To use CJ-series Expansion Rack, the I/O Control Unit is necessary.

<I/O Expansion System>

Unit name	SYSMAC $\alpha$ -series	CJ-series	Description
Power Supply Units	C200HW-PA□□□	CJ1W-PA202 (AC Power Supply Unit)	With maintenance forecast monitor.
		CJ1W-PA205C (AC Power Supply Unit)	
		CJ1W-PA205R (AC Power Supply Unit)	The RUN output does not operate.
	C200HW-PD□□□	CJ1W-PD022 (DC Power Supply Unit, non insulated type)	
		CJ1W-PD025 (DC Power Supply Unit)	
Backplanes (Expansion Backplanes)	C200HW-BI031 C200HW-BI051 C200HW-BI081-V1 C200HW-BI101-V1	Unnecessary  < DIN track > PFP-50N PFP-100N PFP-100N2	The Backplane is not necessary for the CJ series. Install the CJ-series units on the DIN track.
Expansion Unit (I/O Control Unit)	Unnecessary	CJ1W-II101	To use CJ-series Expansion Rack, the I/O Control Unit is necessary.
Connecting Cables for Expansion Backplanes	C200H-CN311 (30cm) C200H-CN711 (70cm) C200H-CN221 (2m) C200H-CN521 (5m) C200H-CN131 (100cm)	CS1W-CN313 (30cm) CS1W-CN713 (70cm) CS1W-CN223 (2m) CS1W-CN323 (3m) CS1W-CN523 (5m) CS1W-CN133 (10m) CS1W-CN133-B2 (12m)	Connect the CPU Rack and Expansion Rack using this cable. Or connect the Expansion Rack and Expansion Rack with this cable.
Expansion Backplane Insulation Plates	C200HW-ATT32 C200HW-ATT52 C200HW-ATT82 C200HW-ATTA2	Unnecessary *	* Because the CJ-series has an installation structure to be insulated from the control board etc., Insulation Plates for CPU Backplanes is unnecessary.

<I/O Units, CPU Bus Units>

Unit name	SYSMAC $\alpha$ -series	CJ-series	Description
Basic I/O Units	C200H-I□□□ C200H-O□□□ C200H-M□□□	CJ1W-I□□□ CJ1W-O□□□ CJ1W-M□□□	Refer to <b>"Appendix E. Table of Input/Output Units"</b> for CJ-series Basic Input/Output Units corresponding to C200H Basic Input/Output Units.
Special I/O Units CPU Bus Units	C200H-□□□□	CJ1W-□□□□	Please select a model which can be used instead of C200H-series Unit used. Refer to manuals of Special I/O Units and CPU Bus Units for specifications. Please examine necessary functions and specifications and select suitable replacement unit.
Communications Units	[SYSMAC LINK] Coaxial cable type: C200HW-SLK23/24 Optical fiber cable type: C200HW-SLK13/14	[SYSMAC LINK] None [Controller Link] Wire type: CJ1W-CLK23 Optical fiber cable type: None	SYSMAC LINK can not be used with CJ-series CPU Units. We recommend you to renew the system with Controller Link. Refer to the <b>Controller Link Units (Wire type) Operation Manual</b> (Cat. No. W309).
	[SYSNET] C200HS-SNT32	[SYSNET] None [Controller Link] Wire type: CJ1W-CLK23. Optical fiber cable type: None	SYSNET can not be used with CJ-series CPU Units. We recommend you to renew the system with Controller Link. Refer to the <b>Controller Link Units (Wire type) Operation Manual</b> (Cat. No. W309).
	[Controller Link] Wire type: C200HW-CLK21	[Controller Link] Wire type: CJ1W-CLK23.	To use the CJ-series, change the related area, including status area. Refer to the <b>Controller Link Units (Wire type) Operation Manual</b> (Cat. No. W309).
	[Host Link]	[Serial Communication]	The C200H Host Link Unit can not be used with CJ-series. Refer to the <b>SYSMACCS/CJ Series Serial Communications Boards/Units OPERATIION MANUAL</b> (Cat. No. W336) for details.
	C200H-LK101-PV1	None CJ1W-SCU21-V1 (+ optical link module)	The CJ-series does not have the Optical-type Serial Communications Unit. Use the wire-type instead, or use an external optical link module.
	C200H-LK201-V1	CJ1W-SCU21-V1 CJ1W-SCU41-V1 Host Link port built-in the CPU Unit * For CJ2M-CPU3□, CP1W-CIF01 is necessary.	Use one of the left CJ-series Units instead.  * The CJ2M-CPU3□ does not have built-in Host Link port. It is necessary to select and purchase the optional serial board (CP1W-CIF01).
	C200H-LK202-V1	CJ1W-SCU31-V1 CJ1W-SCU41-V1	It is not possible to use this Host Link Unit with CJ-series CPU Unit. Use one of the left CJ-series Units, instead.
	[PC Link] C200H-LK401	[PC Link] None  [Controller Link] Wire type: CJ1W-CLK23. Optical Fiber Cable type:None	PC Link Unit can not be used with CJ-series CPU Unit. We recommend you to renew the system with Controller Link. Refer to the <b>Controller Link Units (Wire type) Operation Manual</b> (Cat. No. W309).

Unit name	SYSMAC $\alpha$ -series	CJ-series	Description
Communications Units	[CompoBus/S] C200HW-SRM21(-V1)	[CompoBus/S] CJ1W-SRM21	There are some differences in unit area allocation. Refer to the <b>C200HW-SRM21-V1, CS1W-SRM21, CJ1W-SRM21, CQM1-SRM21-V1, SRT1 Series, SRT2 Series CompoBus/S OPERATIION MANUAL</b> (Cat. No. W226) for details about CompoBus/S.
	[DeviceNet] C200HW-DRM21(-V1)	[DeviceNet] CJ1W-DRM21	There are some differences in unit area allocation. Refer to the <b>SYSMAC CS/CJ SeriesCS Series: CS1W-DRM21(-V1)CJ Series: CJ1W-DRM21DeviceNet Units OPERATIION MANUAL</b> (Cat. No. W380) for details about DeviceNet.
	[SYSBUS] Wire type: C200H-MR201 Optical Fiber Cable type:C200H-RM001-PV1	[SYSBUS] None  [CompoNet] CJ1W-CRM21 [DeviceNet] CJ1W-DRM21 [CompoBus/S] CJ1W-SRM21	SYSBUS can not be used with CJ-series CPU Unit. We recommend you to renewal the system with other network. ·CompoNet Refer to the <b>CS/CJ-series CompoNet Master Units Operation Manual (Cat. No. W456)</b> and <b>CompoNet Slave Unitsand Repeater Unit OPERATIION MANUAL</b> (Cat. No. W457) for details of CompoNet. ·DeviceNet Refer to the <b>SYSMAC CS/CJ Series DeviceNet Units OPERATIION MANUAL</b> (Cat. No. W380) for details of DeviceNet. ·CompoBus/S Refer to the <b>C200HW-SRM21-V1, CS1W-SRM21, CJ1W-SRM21, CQM1-SRM21-V1, SRT1 Series, SRT2 Series CompoBus/S OPERATIION MANUAL</b> (Cat. No. W226) for details of CompoBus/S.
	[PC Card Unit] C200HW-PCU01 C200HW-PCS01-V1	[PC Card Unit] None [ Memory Card] HMC-EF□□□ [Ethernet] CJ1W-ETN21 [EtherNet/IP] CJ1W-EIP21	PC Card Unit can not be used with CJ-series CPU Unit. Insert the memory card into the CJ-series CPU Unit to save and retrieve PLC memory area contents between the CPU Unit and the memory card. Moreover, the communication can be made with the Ethernet Unit and the EtherNet/IP Unit.



<Support software and peripheral devices>

Name	SYSMAC $\alpha$ -series	CJ-series	Description
Support software	SYSMAC Support Software CX-Programmer	CX-One CXONE-AL□□C-V□/ AL□□D-V□ (CX-Programmer)	SYSMAC Support Software can not be used with CJ-series.
Peripheral Interface Unit, connecting cable	CQM1-CIF02	USB Cable	USB2.0 (or, 1.1) cable (A connector – B connector) 5.0m or shorter.
Programming Console	C200H-PRO27 (+C200H-CN□□2) CQM1-PRO01	None	Use CX-Programmer or Programming Console function of the Programmable Terminal (NS-series).


Other remarks

- (1) The DIN track (PFP-50N/100N/100N2) and mounting bracket (C200H-DIN01) for C200H-series can be used for the CJ-series CPU Unit, too.
- (2) Because the CJ-series has an installation structure to be insulated from the control board (DIN track), Insulation Plates for Backplanes (C200H-ATT31/51/81/A1) is unnecessary.



### 3. Reading data from SYSMAC α (C200HX/HG/HE)

Load the ladder program and PLC settings, and Data Memory from the SYSMAC α (C200HX/HG/HE) using the CX-Programmer.


Required items	Support software (PC)	CX-One (CXONE-AL□□C-V□□, CXONE-AL□□D-V□) Or, CX-Programmer(WS02-CXPC□-V□)
	Connecting cable	CQM1-CIF02

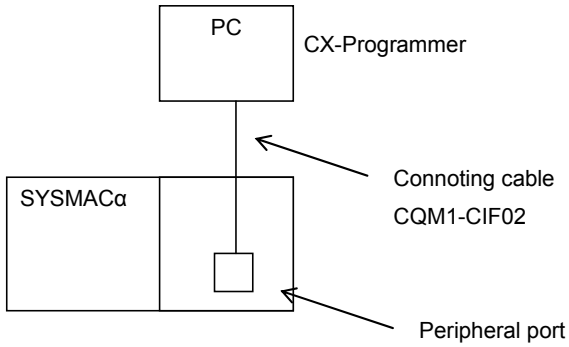


- 1) Connect the SYSMAC α series (C200HX/HG/HE) and the PC.
- 2) Start up the CX-Programmer. (On the Start menu, select **Program - OMRON - CX-One - CX-Programmer - CX-Programmer.**)
- 3) Select C200HX/HG/HE for the Device Type. (Select **File – New.**)

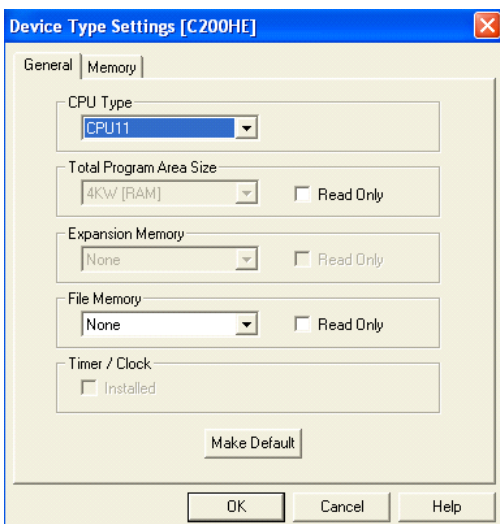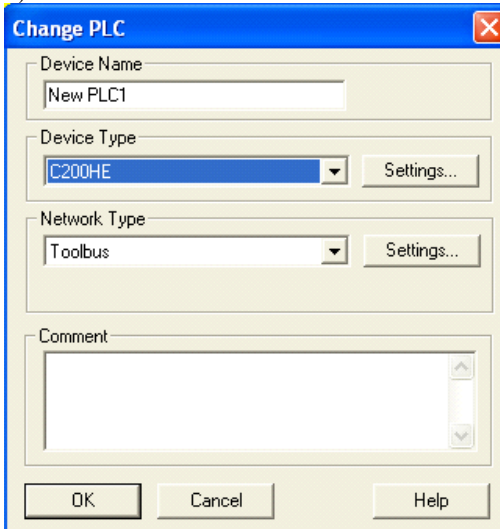


- 4) Connect the PLC and the PC online. (Select **PLC - Work Online.**)
- 5) Load the ladder program and I/O table. (Select **PLC - Transfer - From PLC to PC.**) Press the **OK** button to start transfer.

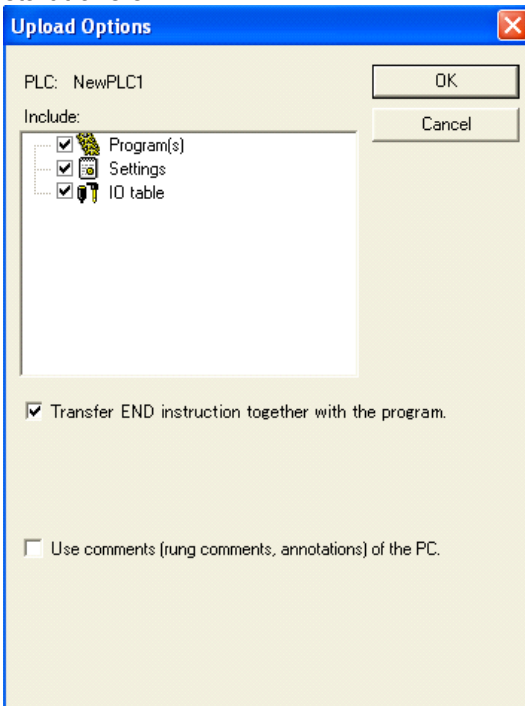

- 6) Load the PLC memory data (Data Memory). (Select **PLC** on the menu bar and then click **Edit - Memory.**)

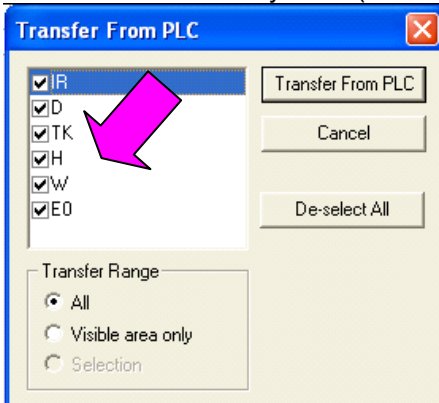

Scroll and check all the areas. Press the **Transfer From PLC** button to start loading.


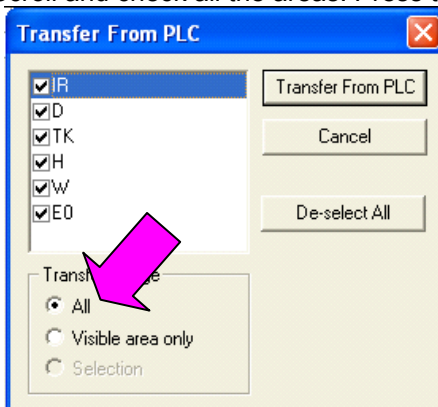


- 7) Make the CX-Programmer offline. (Select **PLC - Work Online.**)
- 8) Save the program by specifying the project name. (Select **File - Save As.**)


#### 4. Converting the program into a program for CJ-series CPU Unit

On the CX-Programmer, convert the program for CJ-series CPU Unit.

- 1) Start the CX-Programmer and open the program file for SYSMAC α. (Select **File – Open.**)
- 2) Change the Device Type from “C200HX/HG/HE” to “CJ2M” or “CJ2H”. (Select **PLC – Change Model.**)

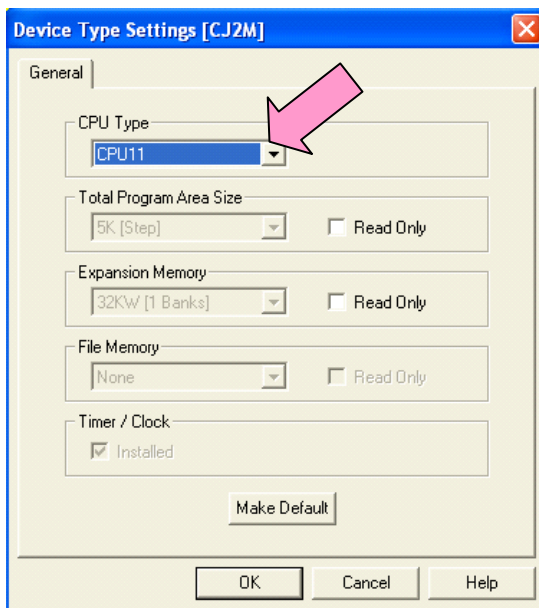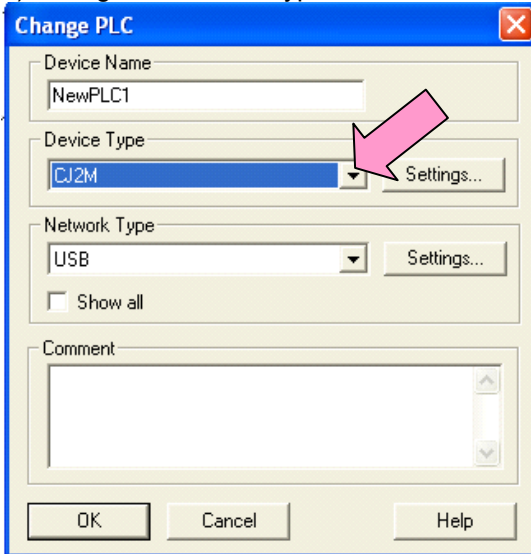


- 3) The instructions are automatically converted. The Output Window shows the conversion results. Double-click an error shown on the Output Window to jump to the corresponding section of the ladder program.

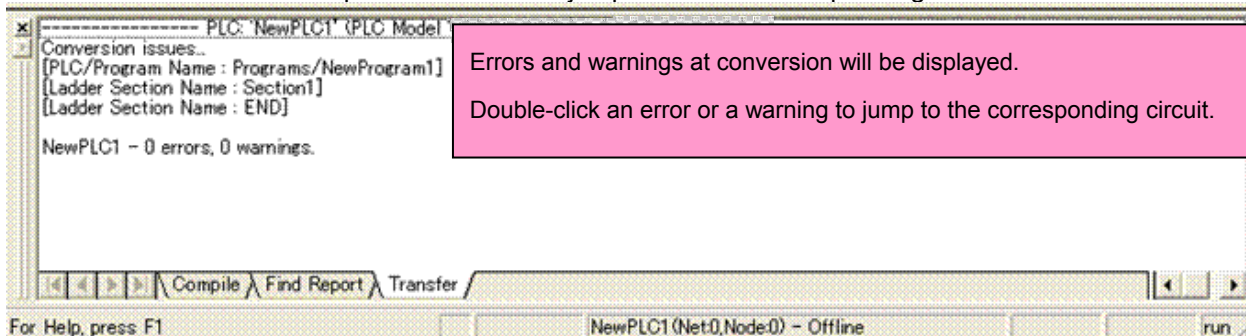

Some instructions can not be converted. Modify the ladder program referring to *Appendix A. Instructions converted by Change Model on CX-Programmer.* You can check the program by executing Program Check at any time (Select **Program – Compile.**) The Output Window will show the checking results.

4) When the model is changed, the data in PLC memory will not be maintained. Open the screen of the PLC memory for both of SYSMAC α and CJ-series CPU Units, and copy and paste necessary data as shown in the below image.

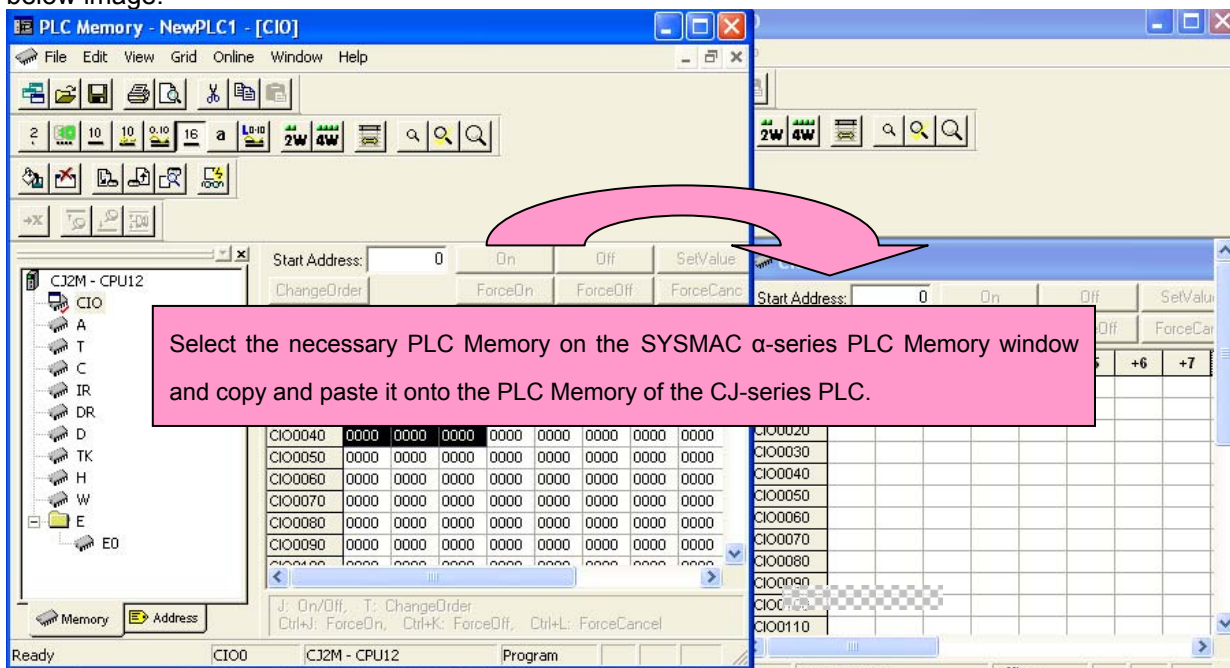

5) The Unit area allocation of SYSMAC α-series is partly different from that of CJ-series. Modify the ladder program referring to **Appendix B. Change of unit area allocation.**

6) The PLC settings of SYSMAC α-series PLC are partly different from that of CJ-series. Change the PLC settings referring to **Appendix C. Change in PLC Settings.**


7) Select **Program – Compile** to check the program. If an error is detected, correct it.

8) Save the program by specifying the project name. (Select **File – Save As.**)


## 5. Writing the data to CJ-series CPU Unit

Transfer the converted/modified program, PLC settings and Data Memory to the CJ-series CPU Unit.


Required items	Support software (PC)	CX-One CXONE-AL□□C-V□/ AL□□D-V□ (CX-Programmer)
	Connecting cable	USB Cable USB2.0 (or, 1.1) cable (A connector – B connector) 5.0m or shorter

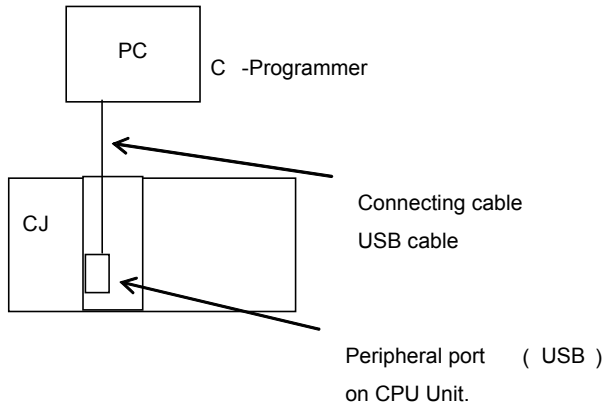

- 1) Connect the CJ-series CPU Unit and the PC.
- 2) Start the CX-Programmer and open the converted program file.
- 3) Connect the CJ-series CPU Unit and CX-Programmer online.
- 4) Transfer the ladder program and PLC settings to the CJ-series CPU Unit. (Select **PLC – Transfer – From PC to PLC.**) Click the check boxes for “Program” and “Settings”. Press the **OK** button to start transfer.

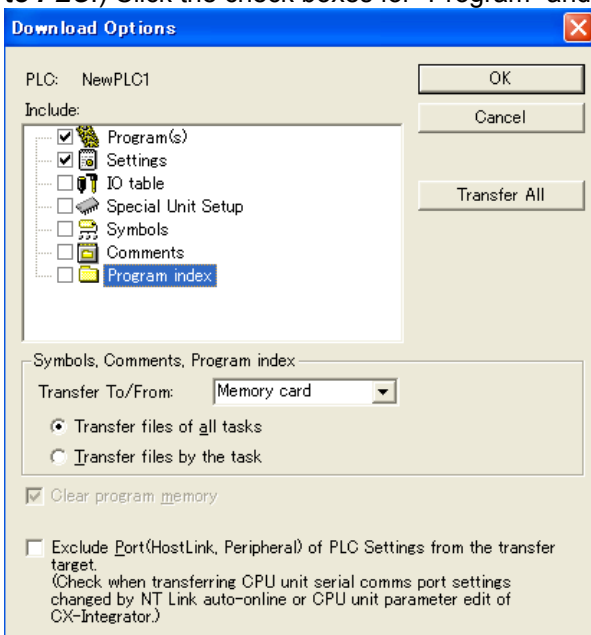

- 5) Select **PLC** on the menu bar and then click **Edit – Memory** to display below dialog. Transfer the PLC memory (Data Memory: D and Holding Relay: HR) after selecting the transfer data. Click the **Transfer to PLC** button.

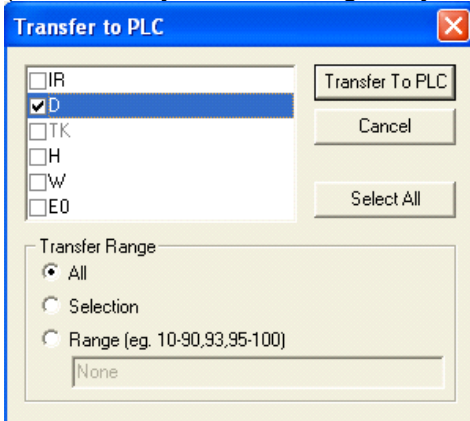

- 6) Make the CX-Programmer offline.

## 6. Appendix

Appendix A. Instructions converted by Change Model on CX-Programmer.

(1) The data type of operand is changed from BCD data to BIN data for some instructions.

(2) The number of operand is changed for some instructions.

(3) Interrupt control instructions must be changed. (Use MSKS, MSKR, CLI, DI, and EI.)

Refer to the table below for details. The table lists the instructions which are automatically converted producing some difference between instructions before and after conversion. The other instructions are converted to the instructions for CJ-series CPU Unit without producing difference.

Instruction for SYSMAC $\alpha$	Instruction for CJ	Operand	Number of Operand
JMP(4)	JMP(4) or JMP0(515)	If the operand data is #0, this instruction is automatically converted into JMP0 instruction and the operand data is deleted. The operation is the same if the operand data is not #0.	#0: 1→0. Not #0: Same as SYSMAC $\alpha$
JME(5)	JME(5) or JME0(516)	If the operand data is #0, this instruction is automatically converted into JME0 instruction and the operand data is deleted. The operation is the same if the operand data is not #0.	#0:1→0 Not #0: Same as SYSMAC $\alpha$
FAL(6)	FAL(6)	#0 data is added to the second operand. FAL N → FAL N #0	Changed from 1 to 2.
FALS(7)	FALS(7)	#0 data is added to the second operand. FALS N → FALS N #0	Changed from 1 to 2.
STEP(8)	STEP(8)	The operand data must be set by Work Area (WR) or Index Resistors (indirect). Change the operand.	Same as SYSMAC $\alpha$
SNXT(9)	SNXT(9)	The operand data must be set by Work Area (WR) or Index Resistors (indirect). Change the operand.	Same as SYSMAC $\alpha$
SCAN(18)	None	Enter the value in the "Constant Cycle Time" from PLC settings	
ADD(30)	+BC(406)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
SUB(31)	-BC(416)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
MUL(32)	*B(424)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
DIV(33)	/B(434)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
INC(38)	++B(452)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
DEC(39)	--B(454)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
MSG(46)	MSG(46)	#0 data is added to the first operand. MSG S → MSG #0 S The number of characters (number of words) that starts from the start address specified by S is different. 16 characters (8 words) → 32 characters (16 words)	Changed from 1 to 2.
LMSG(47)	None	Use MSG (46) instead.	
TERM(48)	None	Please use keyboard mapping function with a touch panel or other device.	
ADB(50)	+C(402)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
SBB(51)	-C(412)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
MLB(52)	*U(422)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
DVB(53)	/U(432)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
ADDL(54)	+BCL(407)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
SUBL(55)	-BCL(417)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
MULL(56)	*BL(425)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
DIVL(57)	/BL(435)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
MPRF(61)	None	Use IORF (97) instead.	
LINE(63)	LINE(63)	The data type of second operand is changed from BCD data to BIN data. For a constant data, "#" is automatically changed to "&". To use word data, change the data type of CH from BCD to BIN.	Same as SYSMAC $\alpha$
COLM(64)	COLM(64)	The data type of third operand is changed from BCD data to BIN data. For a constant data, "#" is automatically changed to "&". To use word data, change the data type of CH from BCD to BIN.	Same as SYSMAC $\alpha$



Instruction for SYSMAC $\alpha$	Instruction for CJ	Operand	Number of Operand
BCNT(67)	BCNTC(621)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
XFER(70)	XFERC(565)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
DIST(80)	DISTC(566)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
COLL(81)	COLLC(567)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
MOVB(82)	MOVBC(568)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
TTIM(87)	TTIM(87)	<p>There is not third operand (reset input contact No.). Add the reset input. (Refer to the figure below)</p>	Changed from 3 to 2.
INT(89)	None	<p>Select and use the instruction below, depending on the function</p> <p>SET INTERRUPTMASK: MSKS(690) instruction</p> <p>CLEAR INTERRUPT: CLI(691) instruction</p> <p>READ INTERRUPT MASK: MSKR(692) instruction</p> <p>DISABLE INTERRUPTS: DI(693) instruction</p> <p>ENABLE INTERRUPTS: EI(694) instruction</p> <p>Scheduled Interrupt Interval: Enter the settings from PLC settings.</p>	
SEND(90)	SEND(90)	The control data type (third operand) is different. Refer to the manual to change the settings.	Same as SYSMAC $\alpha$
WDT(94)	WDT(94)	The operand setting is different.Refer to the manual to change the settings.	Same as SYSMAC $\alpha$
RECV(98)	RECV(98)	The control data type (third operand) is different. Refer to the manual to change the settings.	Same as SYSMAC $\alpha$
BXFR(125)	None	Use XFER(70) or XFERC(565) instead.	
FCS(180)	FCS(180)	The control data type (first operand) is different. Refer to the manual to change the settings.	Same as SYSMAC $\alpha$
SRCH(181)	SRCH(181)	The control data to specify table length (first operand) is different. Refer to the manual to change the settings.	Same as SYSMAC $\alpha$
MAX(182)	MAX(182)	The control data type (first operand) is different. Refer to the manual to change the settings.	Same as SYSMAC $\alpha$
MIN(183)	MIN(183)	The control data type (first operand) is different. Refer to the manual to change the settings.	Same as SYSMAC $\alpha$
SUM(184)	SUM(184)	The control data type (first operand) is different. Refer to the manual to change the settings.	Same as SYSMAC $\alpha$
PID(190)	PID(190)	The PID parameter (second operand) is different. Refer to the manual to change the settings.	Same as SYSMAC $\alpha$
AVG(195)	AVG(195)	<p>The data type of second operand is changed from BCD data to BIN data.</p> <p>For a constant data, "#" is automatically changed to "&amp;"</p> <p>To use word data, change the data type of the word from BCD to BIN.</p>	Same as SYSMAC $\alpha$
DSW(210)	DSW(210)	<p>The fourth and fifth operands are added.</p> <p>The fourth operand specifies the number of digits that will be read. Check if the number of digits after conversion is the same as the number specified by this operand.</p> <p>The fifth operand uses one word for work area.It is not possible to use this work word for another purpose; change the allocation to another area if the area assigned by conversion is used by another purpose.</p>	Changed from 3 to 5.
HKY(212)	HKY(212)	<p>The fourth operand is added.</p> <p>The fourth operand uses one word for work word. .It is not possible to use this work word for another purpose; change the allocation to another area if the area assigned by conversion is used by another purpose.</p>	Changed from 3 to 4

Instruction for SYSMAC $\alpha$	for	Instruction for CJ	Operand	Number of Operand
MTR(213)		MTR(213)	The fourth operand is added. The fourth operand uses one word for work word. It is not possible to use this work word for another purpose; change the allocation to another area if the area assigned by conversion is used by another purpose.	Changed from 3 to 4.
7SEG(214)		7SEG(214)	The fourth operand is added. The fourth operand uses one word for work word. It is not possible to use this work word for another purpose; change the allocation to another area if the area assigned by conversion is used by another purpose.	Changed from 3 to 4.
IORD(222)		IORD(222)	The operand data is different. Please refer to the SYSMAC CS/CJ/NSJ Series INSTRUCTIONS REFERENCE MANUAL (Cat.No. W474)", and change the settings.	Same as SYSMAC $\alpha$
IOWR(223)		IOWR(223)	The operand data is different. Please refer to the SYSMAC CS/CJ/NSJ Series INSTRUCTIONS REFERENCE MANUAL (Cat.No. W474)", and change the settings.	Same as SYSMAC $\alpha$
RXD(235)		RXD(235)	It is not possible to specify the Peripheral Port on this instruction. The data type of third operand (Number of bytes to store) is changed from BCD data to BIN data. For a constant data, "#" is automatically changed to "&" To use word data, change the data type of the word from BCD to BIN.	Same as SYSMAC $\alpha$
TXD(236)		TXD(236)	It is not possible to specify the Peripheral Port on this instruction. The data type of third operand (Number of bytes to store) is changed from BCD data to BIN data. For a constant data, "#" is automatically changed to "&" To use word data, change the data type of the word from BCD to BIN.	Same as SYSMAC $\alpha$
STUP(237)		STUP(237)	The port selection (first operand) data is different. Refer to the manual to change the settings.	
PMCR(260)		PMCR(260)	The control data type (first operand) is different. Refer to the manual to change the settings.	Changed from 3 to 4.
CMCR(261)		None	Insert the memory card into CPU Unit and use FREAD(700) or FWRIT(700) instead.	
FPD(269)		FPD(269)	The data type of control data for FAL number (first operand) and error monitoring time setting (second operand) is different.	
XDMR(280)		None	Use XFER(70) or XFERC(565) instead.	
EMBC(281)		EMBC(281)	The data type of operand is changed from BIN data to BCD data. For a constant data, "#" is automatically changed to "&" To use word data, change the data type of the word from BCD to BIN.	Same as SYSMAC $\alpha$
TST(350)		TST(350)	The data type of second operand is changed from BCD data to BIN data. For a constant data, "#" is automatically changed to "&" To use word data, change the data type of the word from BCD to BIN.	Same as SYSMAC $\alpha$
TSTN(351)		TSTN(351)	The data type of second operand is changed from BCD data to BIN data. For a constant data, "#" is automatically changed to "&" To use word data, change the data type of the word from BCD to BIN.	Same as SYSMAC $\alpha$
ADBL(480)		+CL(403)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
SBBL(481)		-CL(413)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
MBSL(482)		*L(421)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
DBSL(483)		/L(431)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
MBS(484)		*(420)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
DBS(485)		/(430)	Same as SYSMAC $\alpha$	Same as SYSMAC $\alpha$
BXF2		None	Use XFER(70) or XFERC(565) instead.	
XFR2		None	Use XFER(70) or XFERC(565) instead.	
IEMS		None	Specify another address by using index register.	

Appendix B. Change of data area allocation

The table below lists the difference of the unit area allocation in the SYSMAC $\alpha$  and the CJ-series PLCs.

Refer to the related manuals for details.

Item	SYSMAC $\alpha$ -series	CJ-series	Description
I/O allocation Basic I/O	"Free location and fixed words allocation"	"Free location and free words allocation" Change the word address and bit address used in the program.	<b>Refer to the CJ2 CPU Unit Software USER'S MANUAL (Cat. No. W473) for details on unit area allocation.</b>
I/O allocation Special I/O Units	IR 100 to 199 IR 400 to 459 (10 words allocated for each Unit No.) DM1000 to 2599 (100 words allocated for each Unit No.)	CIO 2000 to 2199 (10 words allocated for each Unit No.) DM20000 to 21999 (100 words allocated for each Unit No.) Change the word address and bit address used in the program.	
I/O allocation Special I/O Units (Group-2)	IR 30 to 49 IR 330 to 341 (2 or 4 words allocated for each Unit)	The allocation is decided in the same way as a Basic I/O Units depending on the installed position (rack and slot). Change the word address and bit address used in the program.	
Link Relay Area	LR00 to 63	None	The PC Link Unit can not be used with CJ-series.
Special Relay Area  Auxiliary Relay Area	SR 236 to 255 SR 256 to 299  AR00 to 27	(1)AR Area and Bit Change the word address and bit address used in the program. (2)Condition Flag and clock pulse Change the operation flags in the program to the condition flags. Use the global symbols such as P_0.1ms and P_1ms instead of the clock pulse.	Use the labels instead of operation flags and condition flags for CJ-series CPU Unit.
Auxiliary Relay Area for PC Link	SR 247 to 250 (In Auxiliary Relay Area)	None	The PC Link Unit can not be used with CJ-series
Optical I/O Unit and I/O Terminal Area	IR 200 to 231	None	The Optical I/O Unit cannot be used with CJ.
DeviceNet SYSBUS Remote I/O	IR 50 to 99 IR 350 to 399	<DeviceNet relay area > CIO 3200 to 3799 < SYSMAC BUS relay area > None	The SYSBUS Unit cannot be used with CJ.
Work area	IR 310 to 329 IR 342 to 349 IR 460 to 511	CIO 1200 to 1499 CIO 3800 to 6143 WR 000 to 511	
Temporary Relay Area (TR)	TR0 to 7	TR0 to 15	
Holding Relay Area (HR)	HR00 to 99	HR 000 to 959	
History Log Area	DM6000 to 6030	AR 100 to A199	Change the program if the Error History Area is read in the program.

Appendix C. Change of PLC Settings

Item	SYSMAC $\alpha$ -series	CJ-series	Description
PLC Setup Area	Always uses DM area (D6600 to 6655) for PLC settings.	Uses dedicated area for PLC settings (there is no address for setting by users.)	Refer to the related manuals for details.

Appendix D. Change of execution timing etc

Item	SYSMAC $\alpha$ -series	CJ-series	Description
Interrupt execution method and execution timing	Write the interrupt program in subroutine.	Write the interrupt program in interrupt task.	For CJ-series, an Interrupt Task is executed even when an instruction is being executed or I/O refreshing.
I/O Table Creation	Unnecessary	Necessary For CJ-series, it is necessary to register I/O table on peripheral devices, such as CX-Programmer.	
Cycle Time	-	The cycle time is shortened with CJ-series. If the system operation is affected by the cycle time, check the operation with the converted program.	To obtain the same cycle time as SYSMAC $\alpha$ , set the time from the "Constant Cycle Time" in the PLC settings.

Appendix E. Table of Input/Output Units

◆ Input Units

- (1) Terminal block is different between the Input Units of C200H-series and CJ-series. Please change the wirings.
- (2) If connector specifications are different between the Input Unit of C200H-series and CJ-series, please change the wirings.
- (3) If input specification is not same, check if there is no problem in operation.
- (4) If the number of circuit is different (increased), wire and connect the terminals and each common terminals.
- (5) If the current consumption is different, check if enough power supply capacity is provided.
- (6) Detailed specifications are different. Refer to the related manuals.

DC Input Units

C200H -series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-ID211</b> 12 - 24VAC/10mA, Terminal block, 8 inputs	<b>CJ1W-ID211</b> 24 VDC, 7mA, Terminal block, 16 inputs	DC Input Unit with terminal block for 8 inputs. Replace this unit with a DC Input Unit with 16 inputs.	1) Terminal block 2) Number of inputs (8 -> 16 points) 3) Input circuit specification • Input impedance (2kΩ→3.3kΩ) • ON voltage (10.2VDC→14.4VDC) • OFF voltage (3VDC→5VDC) 4) Internal current consumption (5VDC:10mA→80mA)
<b>C200H-ID212</b> 24 VDC, 7mA, Terminal block, 16 inputs	<b>CJ1W-ID211</b> 24 VDC, 7mA, Terminal block, 16 inputs	DC Input Unit with terminal block for 16 inputs.	1) Terminal block 2) Input circuit specification • Input impedance (3kΩ→3.3kΩ) 3) Internal current consumption (5VDC:10mA→80mA)
<b>C200H-ID215</b> 24VDC, 4.1mA, Connector, 32 inputs (Special I/O)	<b>CJ1W-ID231</b> 24VDC, 4.1mA, Connector, 32 inputs	DC Input Unit with connector for 32 inputs.	1) Connector 2) Number of circuit (8 points/common x4 circuits →16 points/common x2 circuits) 3) Input circuit specification • ON voltage (14.4VDC→19VDC) 4) Internal current consumption (5VDC:130mA→90mA)
<b>C200H-ID216</b> 24VDC, 4.1mA, Connector, 32 inputs (Group-2)	<b>CJ1W-ID231</b> 24VDC, 4.1mA, Connector, 32 inputs	DC Input Unit with connector for 32 inputs.	1) Number of circuit (32 points/common x1 circuit →16 points/common x2 circuits) 2) Input circuit specification • ON voltage (14.4VDC→15.4VDC) 3) Internal current consumption (5VDC:100mA→90mA)
<b>C200H-ID218</b> 24VDC, 6mA, Connector, 32 inputs (Group-2)	<b>CJ1W-ID231</b> 24VDC, 4.1mA, Connector, 32 inputs	DC Input Unit with connector for 32 inputs.	1) Number of circuit (32 points/common x 1 circuit →16 points/common x 2 circuits) 2) Internal current consumption (5VDC:100mA→90mA)
<b>C200H-ID111</b> 12 VDC, 4.1mA, Connector, 64 inputs (Group-2)	<b>CJ1W-ID261</b> 24VDC, 4.1mA, Connector, 64 inputs	DC Input Unit with connector for 64 inputs.	1) Number of circuit (32 points/common x 2 circuit →16 points/common x 4 circuits) 2) Input circuit specification, • Input voltage (12VDC→24VDC), • Input impedance (2.7kΩ→5.6kΩ) • ON voltage (8VDC→19VDC) • OFF voltage (3VDC→5VDC) 3) Internal current consumption (5VDC:120mA→90mA)
<b>C200H-ID217</b> 24VDC, 4.1mA, Connector, 64 inputs (Group-2)	<b>CJ1W-ID261</b> 24VDC, 4.1mA, Connector, 64 inputs	DC Input Unit with connector for 64 inputs.	1) Number of circuit (32 points/common x 2 circuit →16 points/common x 4 circuits) 2) Input circuit specification • ON voltage (14.4VDC→19VDC) 3) Internal current consumption (5VDC:120mA→90mA)
<b>C200H-ID219</b> 24VDC, 6.0mA, Connector, 64 inputs (Group-2)	<b>CJ1W-ID261</b> 24VDC, 4.1mA, Connector, 64 inputs	DC Input Unit with connector for 64 inputs.	1) Number of circuit (32 points/common x 2 circuit →16 points/common x 4 circuits) 2) Input circuit specification • Input impedance (3.9kΩ→5.6kΩ) • ON voltage (15.4VDC→19VDC) 3) Internal current consumption (5VDC:120mA→90mA)

<TTL Input Unit>

C200H-series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-ID501</b> 5 VDC, 3.5mA, Connector, 32 outputs (Special I/O)	No replacement model	TTL Input Unit with connector for 32 inputs. The CJ-series does not have the same type of Unit. We recommend to use the DC Input Unit CJ1W-ID231 (24VDC input type) or TTL Input/Output Unit CJ1W-MD563 instead.	

<AC Input Unit>

C200H-series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-IA121</b> 100-120VAC/10mA, Terminal block, 8 inputs	<b>CJ1W-IA111</b> 100-120VAC/7mA, Terminal block, 16 inputs	100VAC Input Unit with terminal block for 8 inputs. Replace this unit with a 100VAC Input Unit with 16 inputs.	1) Terminal block 2) Number of inputs (8 -> 16 points) 3) Input circuit specification, • Input impedance (9.7kΩ→14.5kΩ), • ON voltage (60VAC→70VAC) 4) Internal current consumption (5VDC:10mA→90mA)
<b>C200H-IA221</b> 200-240VAC/10mA, Terminal block, 8 inputs	<b>CJ1W-IA201</b> 200-240VAC/9mA, Terminal block, 8 inputs	200VAC Input Unit with terminal block for 8 inputs.	1) Terminal block 2) Number of inputs (8 -> 8 points*) * Occupies 1 word (area for 16 points) for Unit area allocation. 3) Internal current consumption (5VDC:10mA→80mA)
<b>C200H-IA122/IA122V</b> 100-120VAC/10mA, Terminal block, 16 inputs IA122V; model conforming to EC Directive	<b>CJ1W-IA111</b> 100-120VAC/7mA, Terminal block, 16 inputs	100VAC Input Unit with terminal block for 16 inputs.	1) Terminal block 2) Input circuit specification, • Input impedance (9.7kΩ→14.5kΩ), • ON voltage (60VAC→70VAC) 3) Internal current consumption (5VDC:10mA→90mA)
<b>C200H-IA222/IA222V</b> 200-240VAC/10mA, Terminal block, 16 inputs IA222V: model conforming to EC Directive	<b>CJ1W-IA201</b> 200-240VAC/9mA, Terminal block, 8 inputs	200VAC Input Unit with terminal block for 16 inputs. Replace this unit with two 200VAC Input Units with 8 inputs.	1) Terminal block 2) Number of circuit (16 points/common x 1 circuit →8 points/common x 2 circuits) 3) Internal current consumption (5VDC:10mA→80mA × 2units)

<AC/DC Input Unit>

C200H-series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-IM211</b> 12-24 VAC/VDC , Terminal block, 8 inputs	<b>CJ1W-ID211</b> 24 VDC, 7mA, Terminal block, 16 inputs	AC/DC Input Unit with terminal block for 8 inputs. Replace this unit with a DC Input Unit with 16 inputs. The CJ-series does not have the AC/DC Input Unit. If this Unit is used with AC inputs, change the wiring for DC inputs.	1) Terminal block 2) Input points: (8 -> 16 points) 3) Input circuit specification • Input voltage range (12-24VAC/DC→24VDC) • Input impedance (2kΩ→3.3kΩ) • ON voltage (10.2VDC→14.4VDC) • OFF voltage (3VDC→5VDC) 4) Internal current consumption (5VDC:10mA→80mA)
<b>C200H-IM212</b> 24 VAC/VDC , Terminal block, 16 inputs	<b>CJ1W-ID211</b> 24 VDC, 7mA, Terminal block, 16 inputs	AC/DC Input Unit with terminal block for 16 inputs. Replace this unit with a DC Input Unit with 16 inputs. The CJ-series does not have the AC/DC Input Unit. If this Unit is used with AC inputs, change the wiring for DC inputs.	1) Terminal block 2) Number of circuit (16 points/common x 1 circuit →8 points/common x 2 circuits) 3) Input circuit specification • Input voltage range (24VAC/DC→24VDC), • Input impedance (3kΩ→3.3kΩ) 4) Internal current consumption (5VDC:10mA→80mA)

## ◆ Output Unit

- (1) Terminal block is different between the Output Unit of C200H-series and CJ-series. Please change the wirings.
- (2) If connector specifications are different in Units of C200H-series and CJ-series, please change the wirings.
- (3) If the number of circuit is different (increased), wire and connect the terminals and each common terminals.
- (4) If the output specifications are not same, check if the outputs operate normally.
- (5) The service life of built-in relays might change depending on the usage, when the use relay is different. Refer to **Appendices A-1-3 Precautions on Contact Output Unit of CJ2 CPU Unit Hardware USER'S MANUAL (Cat. No. W472)** for details.
- (6) If the current consumption is different, check if enough power supply capacity is provided.
- (7) If the voltage and current consumption of external power supply is different, check if enough power supply capacity is provided.
- (8) Detailed specifications are different. Refer to the related manuals.

### <Relay Output Units>

C200H-series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-OC223</b> 250VAC/24VDC, 2A, Terminal block, 5 independent contacts	<b>CJ1W-OC201</b> 250VAC/24VDC, 2A, Terminal block, 8 independent contacts	Relay Output Units with terminal block for 5 outputs (independent contacts). Replace this unit with a Relay Output Unit with 8 outputs (independent contacts).	1) Terminal block 2) Output points (independent contacts 5 points → 8 points) 3) Output circuit specification • ON/OFF response time (10ms→15ms) • Used relays 4) Internal current consumption (5VDC: 10mA→90mA, 26VDC: 46mA→24VDC 48mA)
<b>C200H-OC224</b> 250VAC/24VDC, 2A, Terminal block, 8 independent contacts	<b>CJ1W-OC201</b> 250VAC/24VDC, 2A, Terminal block, 8 independent contacts	Relay Output Units with terminal block for 8 outputs (independent contacts).	1) Terminal block 2) Output circuit specification, • ON/OFF response time (10ms→15ms) • Used relays 3) Internal current consumption (5VDC: 10mA→90mA, 26VDC: 75mA→24VDC 48mA)
<b>C200H-OC224V, OC224N</b> 250VAC/24VDC, 2A, Terminal block, 8 independent contacts	<b>CJ1W-OC201</b> 250VAC/24VDC, 2A, Terminal block, 8 independent contacts	Relay Output Units with terminal block for 8 outputs (independent contacts).	1) Terminal block 2) Output circuit specification • Used relays 3) Internal current consumption (5VDC: 10mA→90mA, 26VDC: 90mA→24VDC 48mA)
<b>C200H-OC221</b> 250VAC/24VDC, 2A, Terminal block, 8 outputs	<b>CJ1W-OC211</b> 250VAC/24VDC, 2A, Terminal block, 16 outputs	Relay Output Units with terminal block for 8 outputs. Replace this unit with a Relay Output Unit with 16 outputs.	1) Terminal block 2) Output points: (8 → 16 points) 3) Output circuit specification, • ON/OFF response time (10ms→15ms) • Used relays 4) Internal current consumption (5VDC: 10mA→110mA, 26VDC: 75mA→24VDC: 96mA)
<b>C200H-OC222</b> 250VAC/24VDC, 2A, Terminal block, 12 outputs	<b>CJ1W-OC211</b> 250VAC/24VDC, 2A, Terminal block, 16 outputs	Relay Output Units with terminal block for 12 outputs. Replace this unit with a Relay Output Unit with 16 outputs.	1) Terminal block 2) Output points (12 → 16 points) 3) Number of circuit (12 points/common x1 circuit → 8 points/common x2 circuits) 4) Output circuit specification • ON/OFF response time (10ms→15ms) • Used relays 5) Internal current consumption (DC5V: 10mA→ 110mA, 26VDC: 75mA→96mA)
<b>C200H-OC222V, OC222N</b> 250VAC/24VDC, 2A, Terminal block, 12 outputs	<b>CJ1W-OC211</b> 250VAC/24VDC, 2A, Terminal block, 16 outputs	Relay Output Units with terminal block for 12 outputs. Replace this unit with a Relay Output Unit with 16 outputs.	1) Terminal block 2) Output points (12 → 16 points) 3) Number of circuit (12 points/common x1 circuit → 8 points/common x2 circuits) 4) Output circuit specification • Used relays 5) Internal current consumption (5VDC: 10mA→110mA, 26VDC: 90mA→24VDC: 96mA)

< Relay Output Units >

C200H-series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-OC225</b> 250VAC/24VDC, 2A, Terminal block, 16 outputs	<b>CJ1W-OC211</b> 250VAC/24VDC, 2A, Terminal block, 16 outputs	Relay Output Units with terminal block for 16 outputs.	1) Terminal block 2) Number of circuit (16 points/common x1 circuit →8 points/common x2 circuits) 3) Output circuit specification • ON/OFF response time (10ms→15ms) • Used relays 4) Internal current consumption (5VDC:10mA→110mA, 26VDC: 75mA→24VDC 96mA)
<b>C200H-OC226, OC226N</b> 250VAC/24VDC, 2A, Terminal block, 16 outputs	<b>CJ1W-OC211</b> 250VAC/24VDC, 2A, Terminal block, 16 outputs	Relay Output Units with terminal block for 16 outputs.	1) Terminal block 2) Number of circuit (16 points/common x1 circuit →8 points/common x2 circuits) 3) Output circuit specification •Used relay. 4) Internal current consumption (5VDC:10mA→ 110mA, 26VDC:90mA→24VDC 96mA)

< Transistor Output Unit >

C200H-series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-OD411</b> 12-48 VDC, 1A, Sinking, Terminal block, 8 outputs	<b>CJ1W-OD211</b> 12-24 VDC, 0.5A, Sinking, Terminal block, 16 outputs	Transistor Output Units with terminal block for 8 outputs. Replace this unit with a Transistor Output Unit with 16 outputs.	1) Terminal block 2) Output points (8 -> 16 points) 3) Output circuit specification • Output voltage range (12-48VDC→12-24VDC), • Output capacity (1A/point, 3A/unit →0.5A/point, 5A/unit), • Residual voltage (1.4V→1.5V), • ON response time (0.2ms→0.1ms) • OFF response time (0.3ms→0.8ms) 4) Internal current consumption (5VDC:140mA→100mA)
<b>C200H-OD213</b> 24 VDC, 2.1A, Sinking, Terminal block, 8 outputs	<b>CJ1W-OD211</b> 12-24 VDC, 0.5A, Sinking, Terminal block, 16 outputs	Transistor Output Units with terminal block for 8 outputs. Replace this unit with a Transistor Output Unit with 16 outputs.	1) Terminal block 2) Output points (8 -> 16 points) 3) Output circuit specification • Output capacity (2.1A/point, 5.2A/unit →0.5A/point, 5A/unit), • Residual voltage (1.4V→1.5V), • ON response time (0.2ms→0.1ms) • OFF response time (0.3ms→0.8ms) 4) Internal current consumption (5VDC:140mA→100mA)
<b>C200H-OD214</b> 24 VDC, 0.8A, Sourcing, Terminal block, load short circuit protection, 8 outputs	<b>CJ1W-OD212</b> 24 VDC, 0.5A, Sourcing, Terminal block, load short circuit protection, 16 outputs	Transistor Output Units with terminal block for 8 outputs. Replace this unit with a Transistor Output Unit with 16 outputs.	1) Terminal block 2) Output points (8 -> 16 points) 3) Output circuit specification • Output capacity (0.8A/point, 2.4A/unit →0.5A/point, 5A/unit) • ON response time (1ms→0.5ms) 4) Internal current consumption (5VDC:140mA→170mA)
<b>C200H-OD216</b> 5 - 24 VDC, 0.3A, Sourcing, Terminal block, 8 outputs	<b>CJ1W-OD212</b> 24 VDC, 0.5A, Sourcing, Terminal block, load short circuit protection, 16 outputs	Transistor Output Units with terminal block for 8 outputs. Replace this unit with a Transistor Output Unit with 16 outputs.	1) Terminal block 2) Output points (8 -> 16 points) 3) Output circuit specification • Voltage range (5-24VDC→24VDC) • ON response time (1.5ms→0.5ms) • OFF response time (2ms→1ms) 4) Internal current consumption (5VDC:10mA→100mA, 26VDC: 75mA → 0mA) 5) External power supply: unnecessary → 24VDC/40mA)
<b>C200H-OD211</b> 24 VDC, 0.3A, Sinking, Terminal block, 12 outputs	<b>CJ1W-OD211</b> 12-24 VDC, 0.5A, Sinking, Terminal block, 16 outputs	Transistor Output Units with terminal block for 12 outputs. Replace this unit with a Transistor Output Unit with 16 outputs.	1) Terminal block 2) Output points (12 -> 16 points) 3) Output circuit specification • Residual voltage (1.4V→1.5V), • ON response time (0.2ms→0.1ms) • OFF response time (0.3ms→0.8ms) 4) Internal current consumption (5VDC:160mA→100mA)

<Transistor Output Unit>

C200H Series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-OD217</b> 5-24 VDC, 0.3A, Sourcing, Terminal block, 12 outputs	<b>CJ1W-OD212</b> 24 VDC, 0.5A, Sourcing, Terminal block, load short circuit protection, 16 outputs	Transistor Output Units with terminal block for 12 outputs. Replace this unit with a Transistor Output Unit with 16 outputs.	1) Terminal block 2) Output points (12 -> 16 points) 3) Output circuit specification • Output voltage range (5-24VDC→24VDC) • ON response time (1.5ms→0.5ms) • OFF response time (0.5ms→1.0ms) 4) Internal current consumption (5VDC:10mA→100mA, 26VDC: 75mA→0mA) 5) External power supply: (unnecessary → 24VDC/40mA)
<b>C200H-OD212</b> 24 VDC, 0.3A, Sinking, Terminal block, 16 outputs	<b>CJ1W-OD211</b> 12-24 VDC, 0.5A, Sinking, Terminal block, 16 outputs	Transistor Output Units with terminal block for 16 outputs.	1)Terminal block 2)Output circuit specification • Residual voltage (1.4V→1.5V) • ON response time (0.1ms→0.5ms) • OFF response time (0.3ms→1ms) 3)Internal current consumption (5VDC:180mA→100mA)
<b>C200H-OD21A</b> 24 VDC, 1.0A, Sourcing, Terminal block, load short circuit protection, 16 outputs	<b>CJ1W-OD212</b> 24 VDC, 0.5A, Sourcing, Terminal block, load short circuit protection, 16 outputs	Transistor Output Units with terminal block for 16 outputs.	1)Terminal block 2)Output circuit specification • Output capacity (1A/point, 4A/Unit → 0.5A/point, 5A/Unit) • Residual voltage (0.8V→1.5V) • ON response time (0.1ms→0.5ms) • OFF response time (0.3ms→1ms) 3) Internal current consumption (5VDC:160mA→100mA,) 4) Alarm output (Supported -> Not supported)
<b>C200H-OD218</b> 4.5 to 26.3 VDC, 0.1A, Sinking, Connector, 32 outputs (Group-2)	<b>CJ1W-OD231</b> 12-24 VDC, 0.5A, Sinking, Connector, 32 outputs	Transistor Output Units with connector for 32 outputs.	1) Number of circuit (32 points/common x1 circuit →16 points/common x2 circuits) 2) Output circuit specification, • Output voltage range (5-24VDC→12-24VDC) • Residual voltage (0.8V→1.5V) • OFF response time (0.4ms→0.8ms) 3) Internal current consumption (5VDC:180mA→140mA)
<b>C200H-OD215</b> 4.5 to 26.3 VDC, 0.1A, Sinking, Connector, 32 outputs (Special I/O)	<b>CJ1W-OD231</b> 12-24 VDC, 0.5A, Sinking, Connector, 32 outputs	Transistor Output Units with connector for 32 outputs. * The CJ-series does not have Unit which supports Dynamic Output. Please change wiring for static.	1)Connector 2)Output method (Dynamic or Static mode → Static only) The specification of static is as follows: 3) Number of circuit (8 points/common x4 circuits →16 points/common x2 circuits) 4) Output circuit specification • Output voltage range (5-24VDC→12-24VDC) • Residual voltage (0.7V→1.5V) • ON response time (0.2ms→0.1ms) • OFF response time (0.6ms→0.8ms) 5) Internal current consumption (5VDC: 220mA→140mA)
<b>C200H-OD21B</b> 24 VDC, 0.5A, Sourcing, Connector, load short circuit protection, 32 outputs (Group-2)	<b>CJ1W-OD232</b> 24 VDC, 0.5A, Sourcing, Connector, load short circuit protection, 32 outputs	Transistor Output Units with connector for 32 outputs.	1) Number of circuit (32 points/common x1 circuit →16 points/common x2 circuits) 2) Output circuit specification • Output capacity (0.5A/point, 5A/unit →0.5A/point, 2.5A/common and 5A/unit) • Residual voltage (0.8V→1.5V) • ON response time (0.1ms→0.5ms) • OFF response time (0.3ms→1ms) 3) Internal current consumption (5VDC:180mA→150mA)
<b>C200H-OD219</b> 4.5 to 26.3 VDC, Sinking, 0.1A, Connector, 64 outputs (Group-2)	<b>CJ1W-OD261</b> 12-24 VDC, 0.3A, Sinking, Connector, 64 outputs	Transistor Output Units with connector for 64 outputs.	1) Number of circuit (32 points/common x2 circuits →16 points/common x 4 circuits) 2) Output circuit specification • Output voltage range (5-24VDC → 12-24VDC) • Residual voltage (0.8V→1.5V) • ON response time (0.1ms→0.5ms) • OFF response time (0.4ms→1ms) 3)Internal current consumption (5VDC: 270mA→170mA)



<TTL Output Unit>

C200H Series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-OD501</b> 5 VDC, 35mA, Connector, 32 outputs (Special I/O)	No replacement model	TTL Output Unit with connector for 32 outputs. The CJ-series does not have the same type of Unit. Please consider to replace this unit with Transistor Output Unit (CJ1W-OD231) or TTL Input/Output Unit (CJ1W-MD563).	

<Triac Output Unit >

C200H Series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-OA223</b> 250VAC, 1.2A, Terminal block, 8 outputs	<b>CJ1W-OA201</b> 250VAC, 0.6A, Terminal block, 8 outputs	Triac Output Units with terminal block for 8 outputs.	1) Terminal block 2) Output circuit specification • Output capacity (1.2A/point, 4A/unit →0.6A/point, 2.4A/unit) • Maximum inrush current (15A/100ms,30A/10ms→15A/10ms) • Residual voltage (50-1200mA: 1.5VAC, 10-50mA: 5VAC→1.6VAC). 3) Internal current consumption (5VDC:180mA→220mA)
<b>C200H-OA221</b> 250VAC, 1.2A, Terminal block, 8 outputs	<b>CJ1W-OA201</b> 250VAC, 0.6A, Terminal block, 8 outputs	Triac Output Units with terminal block for 8 outputs.	1) Terminal block 2) Output circuit specification • Output capacity (1A/point, 4A/unit →0.6A/point, 2.4A/unit) • Maximum inrush current: No regulations →15A/10ms • Residual voltage (1.2VAC→1.6VAC) • OFF response time (1/2 of load frequency → 1/2 of load frequency + 1ms) 3) Internal current consumption (5VDC:140mA→220mA)
<b>C200H-OA224</b> 250 VAC, 0.5A, Terminal block, 12 outputs	<b>CJ1W-OA201</b> 250VAC, 0.6A, Terminal block, 8 outputs	Triac Output Units with terminal block for 12 outputs. Replace this unit with two Triac Output Units with 8 outputs.	1) Terminal block 2) Output points: 12 points → 8 points x 2units 3) Number of circuit: (12 points/common x1 circuit →8 points/common x 1 circuit x 2 units) 4) Output circuit specification • Output capacity: 250VAC 0.5A/point, 2A/unit →0.6A/unit, 2.4A/unit x 2 units • Maximum inrush current: 10A/100ms, 20A/10ms→15A/10ms • Residual voltage: 50-500mA: 1.5VAC, 10-50mA: 5VAC→1.6VAC 5) Internal current consumption : 5VDC :270mA→220mA x 2 units
<b>C200H-OA222V</b> 250 V AC, 0.3A, Terminal block, 12 outputs (CE-approved)	<b>CJ1W-OA201</b> 250VAC, 0.6A, Terminal block, 8 outputs	Triac Output Units with terminal block for 12 outputs. Replace this unit with two Triac Output Units with 8 outputs.	1) Terminal block 2) Output points: 12 points → 8 points x 2 units 3) Number of circuit: (12 points/common x1 circuit →8 points/common x 1 circuits x 2 units) 4) Output circuit specification • Maximum inrush current: No regulations →15A/10ms • Residual voltage: (1.2VAC→1.6VAC) • ON response time: (1/2 of load frequency→1ms) • OFF response time: (1/2 of load frequency → 1/2 of load frequency +1ms) 5) Internal current consumption (5VDC:200mA→220mA x 2 units)

## ◆ Input/Output Units

(1) The CJ-series has following Input/Output Units; CJ1W-MD23□, MD26□, and MD563.

(2) Refer to the related manuals for details. Detailed specifications are different in C200H-series and CJ-series Units, though CJ-series Units has basic functions of C200H-series Units.

### <DC Input/Transistor Output Unit>

C200H Series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-MD115</b> 12VDC/16 inputs (4.1mA), 5-24VDC/16 outputs (0.1A, Sinking), Connector (Special I/O)	<b>CJ1W-MD231</b> 24VDC/16 inputs (7mA), 12-24VDC/16 outputs (0.5A, Sinking), Connector	Input/Output Unit with connector for 16 inputs/16 outputs. * The CJ-series does not have Unit which supports Dynamic Output. Please change wiring for static.	1) Connector 2) Output method: (Dynamic or Static mode -> Static only) 3) Internal current consumption: (5VDC:180mA→130mA) The specification of static is as follows: < Output circuit > 4) Number of circuit: (8 points/common x2 circuits →16 points/common x1 circuits) 5) Output circuit specification • Output voltage range: (5-24VDC→ 12-24VDC) • Residual voltage (0.7V→1.5V) • ON response time (0.2ms→0.1ms) • OFF response time (0.6ms→0.8ms) < Input circuit > 6) Number of circuit: (8 points/common x 2 circuits →16 points/common x 1 circuit) 7) Input circuit specification • Input voltage (12VDC→24VDC) • Input impedance (2.7kΩ→3.3kΩ) • ON voltage (8VDC→14.4VDC) • OFF voltage (3VDC→5VDC)
<b>C200H-MD215</b> 24VDC/16 inputs (4.1mA), 5-24VDC/16 outputs (0.1A, Sinking), Connector (Special I/O)	<b>CJ1W-MD231</b> 24VDC/16 inputs (7mA), 12-24VDC/16 outputs (0.5A, Sinking), Connector	Input/Output Unit with connector for 16 inputs/16 outputs. * The CJ-series does not have Unit which supports Dynamic Output. Please change wiring for static.	1) Connector 2) Output method: (Dynamic or Static mode -> Static only) 3) Internal current consumption: (5VDC:180mA→130mA) The specification of static is as follows: < Output circuit > 4) Number of circuit: (8 points/common x2 circuits →16 points/common x1 circuits) 5) Output circuit specification • Output voltage range: (5-24VDC→ 12-24VDC) • Residual voltage (0.7V→1.5V) • ON response time (0.2ms→0.1ms) • OFF response time (0.6ms→0.8ms) < Input circuit > 6) Number of circuit: (8 points/common x 2 circuits →16 points/common x 1 circuit) 7) Input circuit specification • Input impedance (5.6kΩ→3.3kΩ)

<TTL Input/Output Units>

C200H Series Unit	Corresponding CJ-series Unit	Description	Difference
<b>C200H-MD501</b> 5VDC/16 inputs (3.5mA), 5VDC/16 outputs (35mA, Sinking), Connector (Special I/O)	<b>CJ1W-MD231</b> 24VDC/16 inputs (7mA), 12-24VDC/16 outputs (0.5A, Sinking), Connector	Input/Output Unit with connector for 16 inputs/16 outputs. * The CJ-series does not have Unit which supports Dynamic Output. Please change wiring for static. * Please consider to replace this Unit with CJ1W-MD563 (32 inputs/32 outputs).	<ol style="list-style-type: none"> <li>1) Connector</li> <li>2) Output method: (Dynamic or Static mode -&gt; Static only)</li> <li>3) Internal current consumption: (5VDC:180mA→130mA) The specification of static is as follows: &lt; Output circuit &gt;</li> <li>4) Number of circuit: (8 points/common x2 circuits →16 points/common x1 circuits)</li> <li>5) Output circuit specification <ul style="list-style-type: none"> <li>• Output voltage range: (5VDC→ 12-24VDC)</li> <li>• Residual voltage (0.4V→1.5V)</li> <li>• ON response time (0.2ms→0.1ms)</li> <li>• OFF response time (0.3ms→0.8ms)</li> </ul> </li> <li>&lt; Input circuit &gt;</li> <li>6) Number of circuit: (8 points/common x 2 circuits →16 points/common x 1 circuit)</li> <li>7) Input circuit specification <ul style="list-style-type: none"> <li>• Input voltage (5VDC→24VDC)</li> <li>• Input impedance (1.1kΩ→3.3kΩ)</li> <li>• ON voltage (3VDC→14.4VDC)</li> <li>• OFF voltage (1VDC→5VDC)</li> </ul> </li> </ol>

**OMRON Corporation Industrial Automation Company**

Tokyo, JAPAN

Contact: [www.ia.omron.com](http://www.ia.omron.com)

**Regional Headquarters**

**OMRON EUROPE B.V.**

Wegalaan 67-69-2132 JD Hoofddorp  
The Netherlands

Tel: (31)2356-81-300/Fax: (31)2356-81-388

**OMRON ELECTRONICS LLC**

One Commerce Drive Schaumburg,  
IL 60173-5302 U.S.A.

Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

**OMRON ASIA PACIFIC PTE. LTD.**

No. 438A Alexandra Road # 05-05/08 (Lobby 2),  
Alexandra Technopark,  
Singapore 119967

Tel: (65) 6835-3011/Fax: (65) 6835-2711

**OMRON (CHINA) CO., LTD.**

Room 2211, Bank of China Tower,  
200 Yin Cheng Zhong Road,  
PuDong New Area, Shanghai, 200120, China

Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

**Authorized Distributor:**

© OMRON Corporation 2011 All Rights Reserved.  
In the interest of product improvement,  
specifications are subject to change without notice.

**Cat. No. P075-E1-01**

Printed in Japan  
0511(-)